

WG-1200CR (NEC)



正常に開通準備が整うとランプが下記の状態になります。

● POWER	POWER：緑点灯
● ACTIVE	ACTIVE：緑点灯
● 2.4GHz	2.4GHz：緑点灯
● 5GHz	5GHz：緑点灯
● TV	
● CONVERTER	


※背面のCNV/BR/RT スイッチ
(RTモードで使用)

WG1200CR


①機器の設置と配線をしましょう

お住いの建物の環境により、VDSLモデムと一緒に接続する場合があります。

**ア：Wi-Fi接続機器のみレンタル
VDSLモデムをお持ちでない場合**

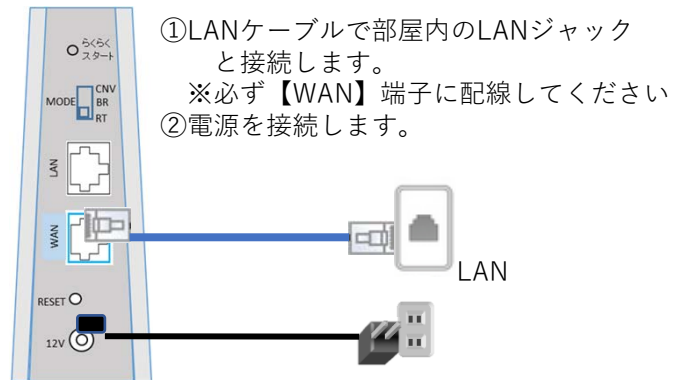

**イ：Wi-Fi接続機器とVDSLモデムをレンタル
VDSLモデムをお持ちの場合**
VDSLモデム（電話線）の接続が必要です。

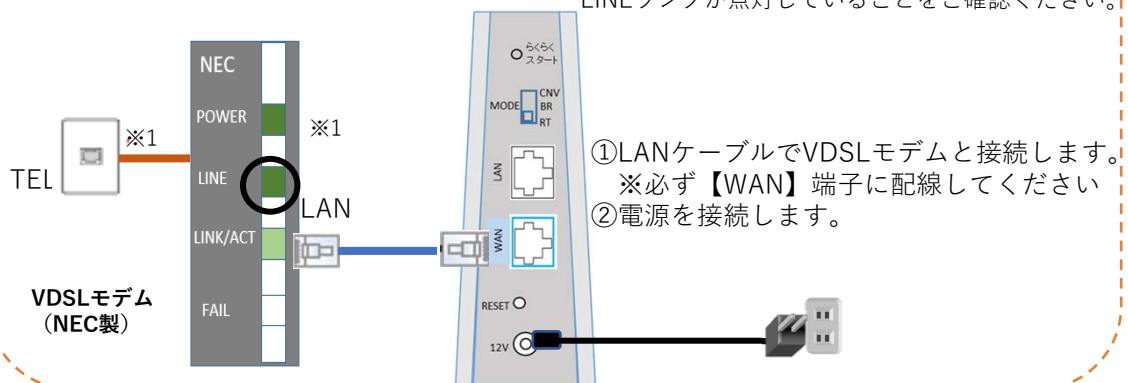

②Wi-Fi接続をしましょう

SSID (2.4GHz): aterm-※※※※※-g
SSID (5GHz): aterm-※※※※※-a
暗号化キー: ※※※※※

※本機器、背面に『SSID』と『暗号化キー』の情報が 있습니다。
ご利用のデバイスでWi-Fiを有効にして
『SSID』を選択、『暗号化キー』を入力しWi-Fi設定を行います。

WG-1200CR(レンタル)

WG-1200CR (NEC)



When the preparation for opening is completed properly, the lamp will be in the following status.


	POWER	POWER : Green lighting
	ACTIVE	ACTIVE : Green lighting
	2.4GHz	2.4GHz : Green lighting
	5 GHz	5GHz : Green lighting
	TV	※CNV/BR/RT switch on the back (Used by RT)
	CONVERTER	

WG1200CR


①Install and wire the devices.

VDSL modem may be needed depend on the environmental of the building.

A : Rent only Wi-Fi connection device
If you do not have a VDSL modem.

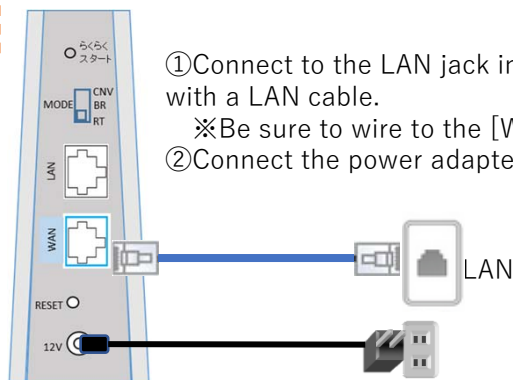

B : Rent Wi-Fi device and VDSL modem
If you have a VDSL modem.

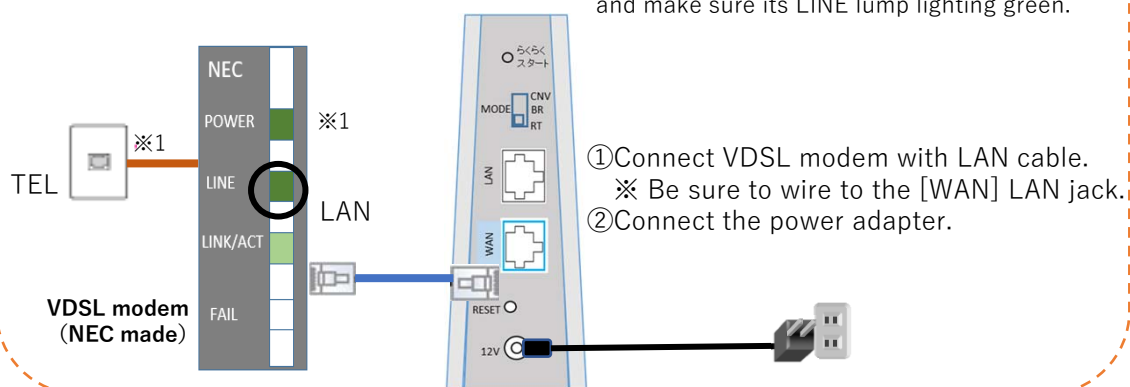

②Connect to Wi-Fi network

SSID (2.4GHz): aterm-※※※※※-g
SSID (5GHz): aterm-※※※※※-a
暗号化キー: ※※※※※

※Information of “SSID” and “暗号化キー” is indicated on the back side of the device.
Enable Wi-Fi on your devices and select “SSID” and enter “暗号化キー” for Wi-Fi setting.